## NanoVIP® BOXTM











www.elcontrol-energy.net




NanoVIP® BOX<sup>TM</sup>

## THE HARDWARE PLATFORM



## NanoVIP® CUBE<sup>TM</sup> platform

- NanoVIP® BOX<sup>™</sup> inherits the technical platform of NanoVIP® CUBE<sup>™</sup>
  - Reliable
  - Price competitive
  - Battery autonomy over 24h
  - Wide range of measurements
  - Full Power Quality analysis

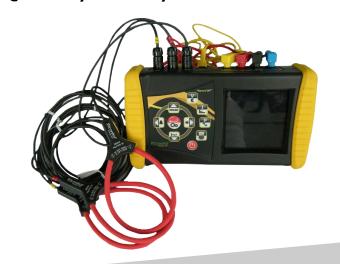




## NanoVIP® CUBE<sup>TM</sup> platform

- NanoVIP® CUBE™ Power Quality analysis:
  - 8 different electrical systems: single phase, two phase, three phase balanced or unbalanced, 3 or 4 leads, UPS3-3, UPS3-1.
  - All standard TRMS values: V, I, P, Q, A, F, PF, THDI%, THDV%...
  - Minimum, average and maximum instant values on 4 quadrants (absorbed and generated)
  - Harmonics up to 50<sup>th</sup> order on all 7 channels
  - Interruptions, micro-interruptions, dips, swells
  - EN50160 test (reference norm for Power Quality)
  - Full Power Quality analysis
  - Event logs (5 alarms, 5 dips, 5 swells, 5 interruptions)
  - Analysis available on three phases and on each single phase

## NanoVIP® CUBE<sup>TM</sup> platform

NanoVIP® BOX<sup>TM</sup> extends NanoVIP® CUBE<sup>TM</sup> with
4G connectivity and self powering capability

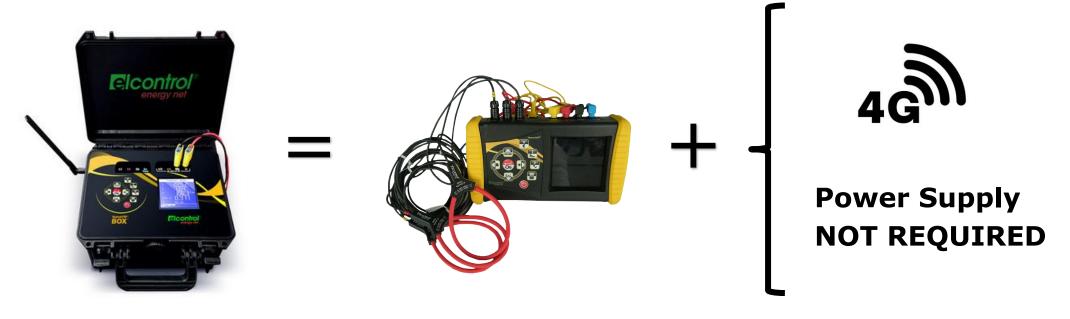



NanoVIP® BOX<sup>TM</sup>


## **BOX MODES AND FEATURES**





#### **PUSH MODE**


- NanoVIP® BOX™ can connect to an available 4G network
- NanoVIP® BOX<sup>TM</sup> will then push data to Elcontrol Cloud Server
- Data can be red through Elcontrol Cloud site

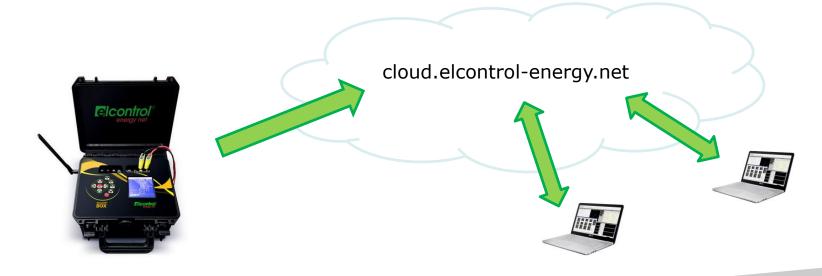



#### REMOTE MODE


- NanoVIP® BOX<sup>TM</sup> can connect to an available 4G network
- NanoVIP<sup>®</sup> BOX<sup>™</sup> can be then automatically reached through internet via NanoRemote<sup>™</sup>
- NanoVIP® can be fully driven from remote
- No network setups are required

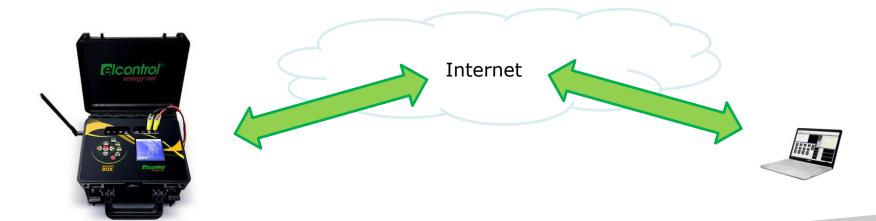



## **SMS Features (From NanoVIP)**

- NanoVIP® BOX<sup>TM</sup> can send SMS directly to user mobile phone:
  - A daily report of device status
  - Alarm info: once an alarm triggers, SMS is sent
  - Patrol message if any event happens on device side: battery decrease, setup change, keyboard touched, SD extracted etc.

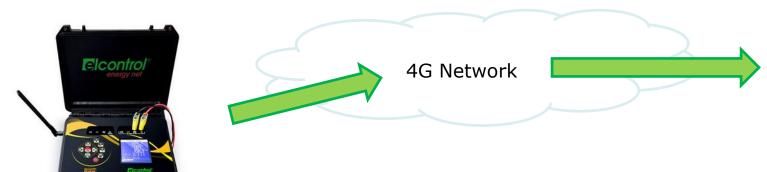








## SMS Features (To NanoVIP)

- NanoVIP® BOX<sup>TM</sup> can receive several SMS commands from user mobile phone, like:
  - Start, Stop and download surveys
  - Setup settings
  - Change of mode: PUSH, REMOTE etc.
  - Start/Stop pushing to cloud

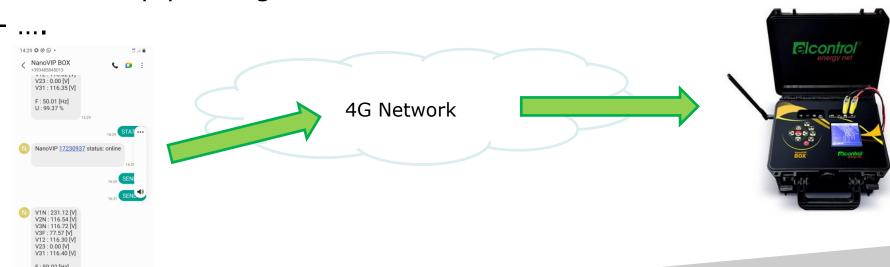





NanoVIP® BOX<sup>TM</sup>


# **ELCONTROL CLOUD** cloud.elcontrol-energy.net






## cloud.elcontrol-energy.net

- Available for free for all NanoVIP® owners
- Suitable for all NanoVIP®
- You can monitor your remote NanoVIP devices status wherever

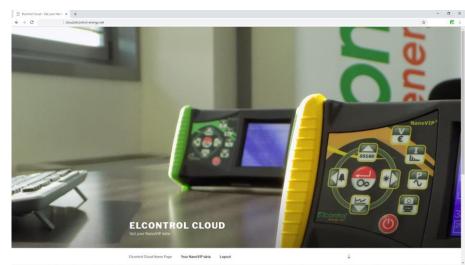

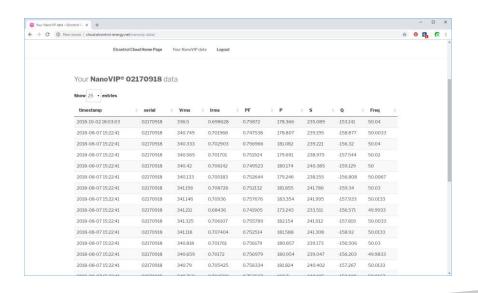





Elcontrol Energy Net Srl Via dell'Industria 32 40043 – Marzabotto Bologna- Italy

www.elcontrol-energy.net

